
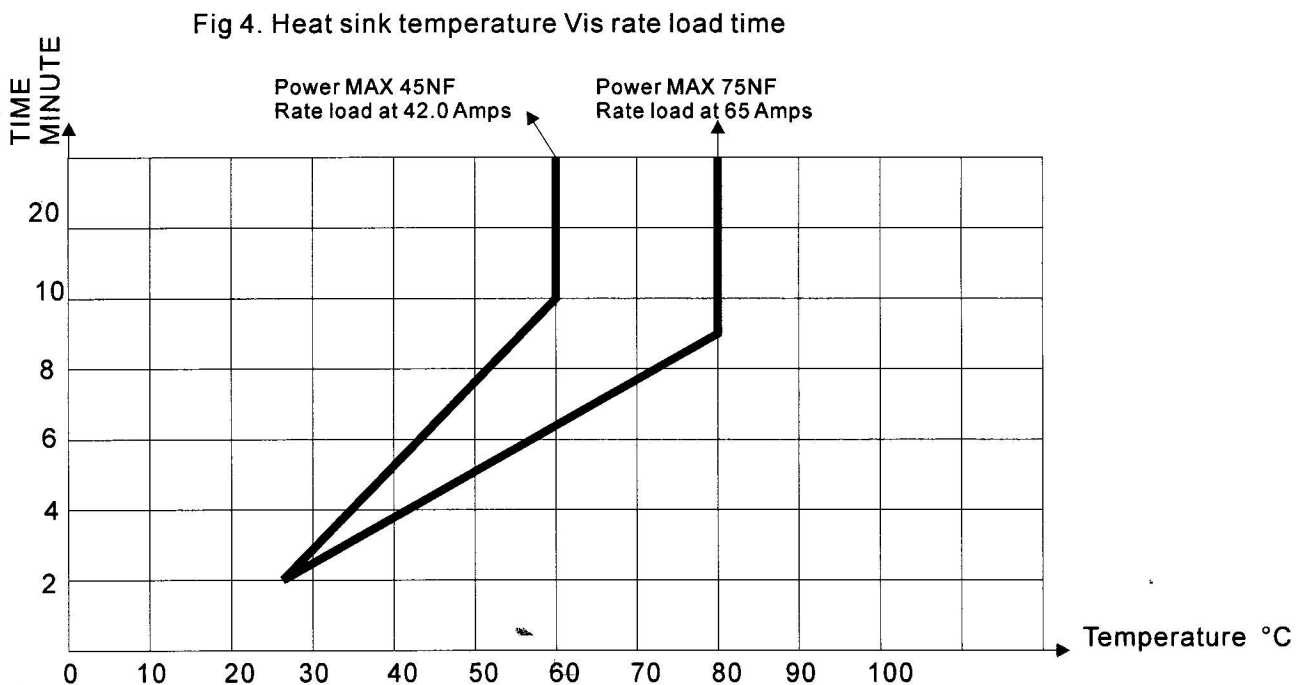


Caution

- 1 This power supply is natively ground, always use the AC outlet with ground terminal.
- 2 Before replacing a fuse make sure you have unplug the Ac plug and never use improperly fuse value.
- 3 Do not block the air convection slits to keep the efficient heat radiation.

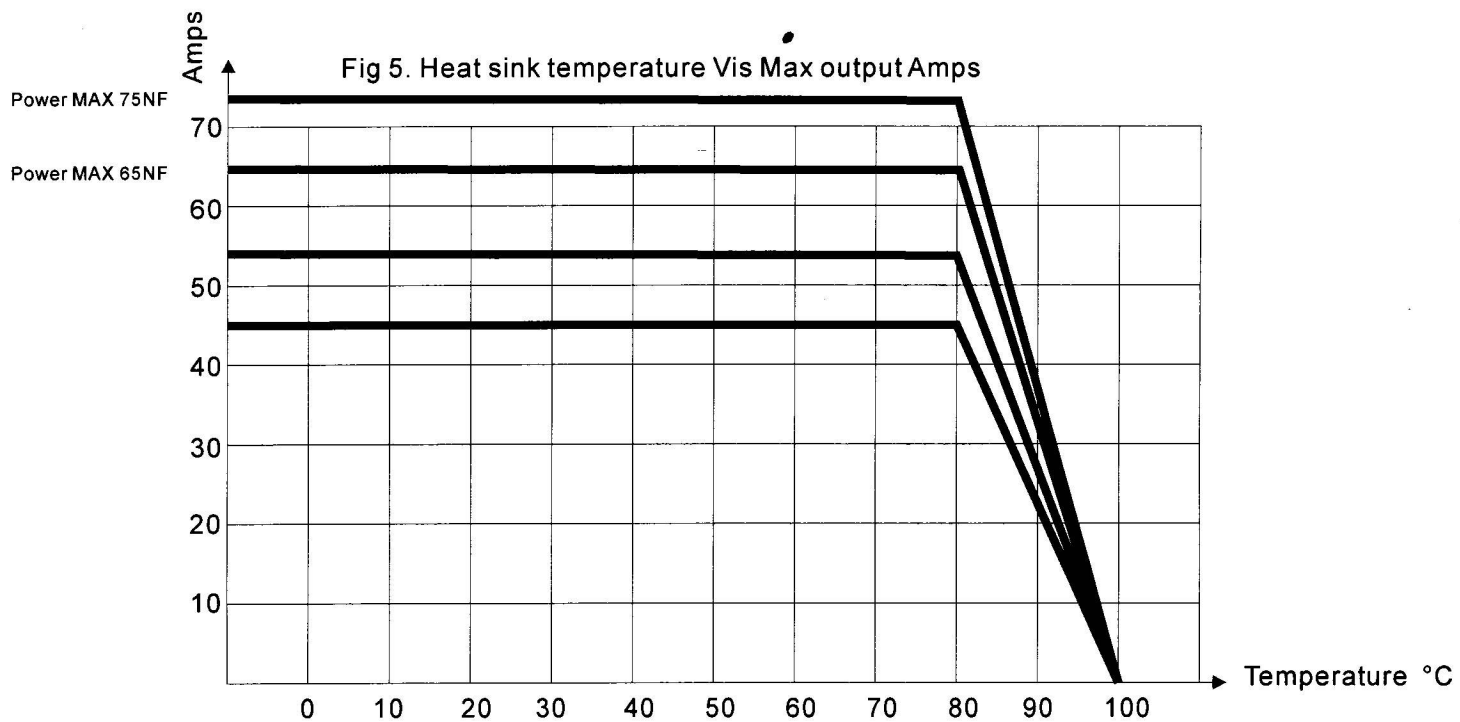

Example for AV-6045 rate load condition: load 40 Amps continuous 6 seconds then load 45 Amps continuous 4 seconds in a circle for 24 hours.