



OPERATING INSTRUCTIONS



dPMR446/PMR446 TRANSCEIVER
IC-F29DR2



INTRODUCTION

Thank you for choosing this Icom product.

This product is designed and built with Icom's state of the art technology and craftsmanship. With proper care, it should provide you with years of trouble-free operation.

IMPORTANT

FIRST, CAREFULLY READ THE BASIC MANUAL that is provided with the transceiver.

SAVE THESE OPERATING INSTRUCTIONS— These operating instructions contain additional important operating instructions for the **IC-F29DR2 dPMR446/PMR446 TRANSCEIVER**.

This transceiver includes some functions that are usable only when they are preset by your dealer. Ask your Icom dealer or system operator for details.

TABLE OF CONTENTS

1 ACCESSORIES	1	5 dPMR™ OPERATION.....	15
Attaching or detaching accessories.....	1	Receiving and transmitting	15
◇ Battery pack	1	◇ Receiving	15
◇ Belt clip.....	1	◇ Transmitting.....	16
◇ Jack cover	2	Break-in function	17
2 PROGRAMMABLE KEY FUNCTIONS.....	3	◇ Receiving	17
Programmable key functions.....	3	◇ Transmitting.....	17
3 LED INDICATOR.....	5	Status call.....	18
About the LED indicator	5	◇ Receiving	18
4 SETTINGS	7	6 OTHER FUNCTIONS.....	19
Setting the Beep function	7	Setting a scan type.....	19
Setting the beep and announcement level.....	8	Tone Scan function.....	20
Setting the Call-Ring ringer	9		
Setting the ringer level.....	10		
Setting the microphone gain.....	11		
Setting the squelch level	12		
Setting the VOX function	13		
Setting the VOX gain.....	14		

Icom, Icom Inc. and the Icom logo are registered trademarks of Icom Incorporated (Japan) in Japan, the United States, the United Kingdom, Germany, France, Spain, Russia, Australia, New Zealand, and/or other countries.

dPMR and the dPMR logo are trademarks of the dPMR MoU Association.

All other products or brands are registered trademarks or trademarks of their respective holders.

Section 1 ACCESSORIES

Attaching or detaching accessories

◇ Battery pack

Attach or detach the battery pack, as shown to the right.

To attach the battery pack:


1. Place the tabs on the bottom of the battery pack into the slots at the bottom of the transceiver. (1)
2. Push the battery pack until the battery release buttons make a 'click' sound. (2)

To detach the battery pack:


1. Push the battery release buttons in the direction of the arrow, as shown to the right. (3)
2. The battery pack is then released, and you can detach it. (4)

To attach

Battery release buttons

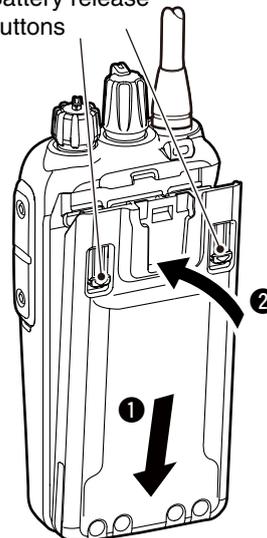

To detach

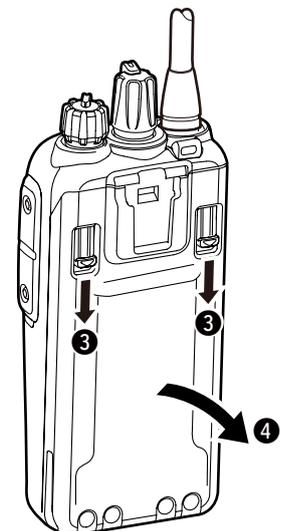

◇ Belt clip

NOTE: Before attaching or detaching the belt clip, detach the battery pack from the transceiver, if it is attached.

To attach the belt clip:


Slide the belt clip in the direction of the arrow until the belt clip locks in place, and makes a 'click' sound. (1)

To detach the belt clip:

Lift the tab up (2), and slide the belt clip in the direction of the arrow (3).

To attach

To detach

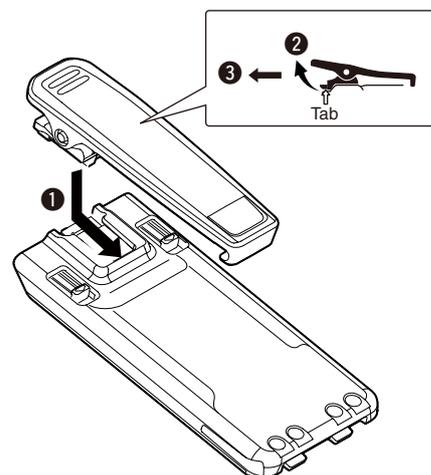


Attaching or detaching accessories (Continued)

◇ Jack cover

NOTE: The transceiver meets IP67 requirements for dust-tight and waterproof protection only when the jack cover or the optional HM-168LWP, HS-94LWP, or HS-95LWP SPEAKER MICROPHONE is attached.

To attach the jack cover:


1. Place the jack cover over the speaker-microphone jack. (1)
2. Insert and tighten the screws. (2)

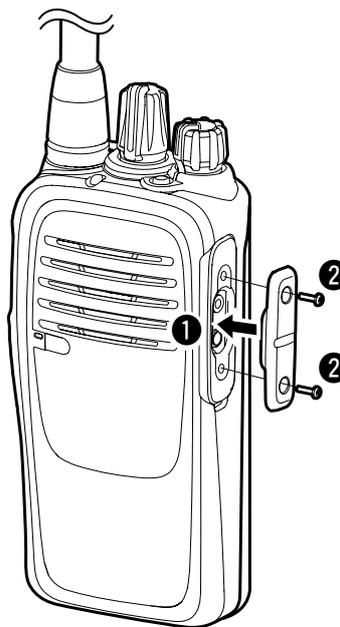

CAUTION: DO NOT detach the jack cover when optional equipment is not in use. Otherwise the terminals of the speaker microphone jack may be shorted by a metal object, or become rusty by water intrusion. This could damage the transceiver.

To detach the jack cover:


1. Unscrew the screws using a Phillips screwdriver. (3)
2. Detach the jack cover. (4)

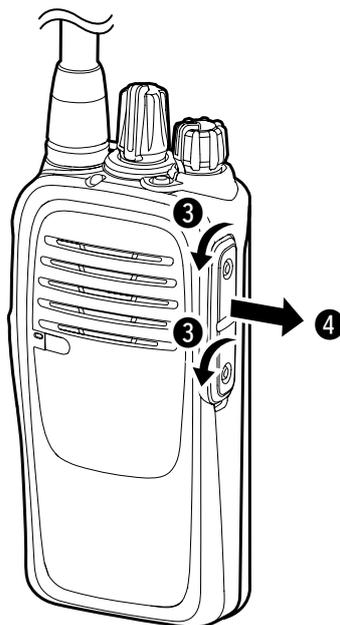

Programmable key functions

You can assign the functions described below to [Top], [Upper], and [Lower] by using the CS-F29DR2 PROGRAMMING SOFTWARE (purchase separately). Ask your dealer for details.

NOTE: Refer to the instruction manual that comes with the transceiver for the default settings of these keys.

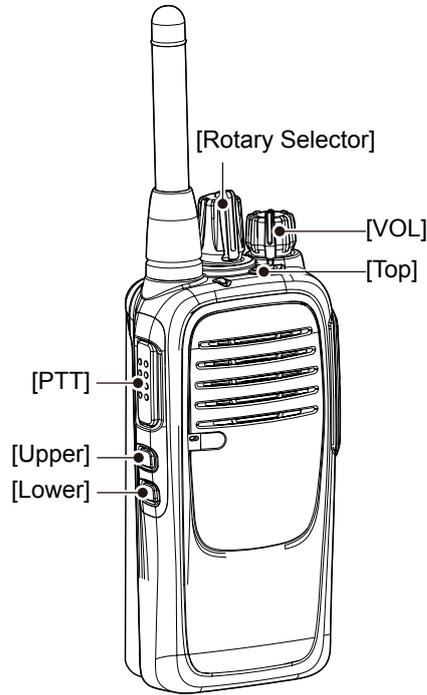

Null

No function is assigned.

ZONE

- Push to select a desired Zone.
- Hold down to announce the current Zone number.
 - ① The Zone number is announced when selecting a Zone, regardless of the Channel Announce setting.

SCAN

NOTE: Select the channels to be scanned by using CS-F29DR2 PROGRAMMING SOFTWARE.

- Push to start or pause a scan.
 - ① When a scan is started with the Power ON Scan or the Automatic scan function, push this key to pause the scan. The paused scan resumes after a set time period.
- Hold down this key while a scan is paused, and then the channel is removed from the scan group.
 - ① The removed channel is automatically added to the scan group again, after the scan is canceled.

MONI

While holding down this key, the C.Tone* mute is released, even if the received signal does not include a matching C.Tone*.

LOCK

Hold down to turn the Key Lock function ON or OFF.
 ① Even when the Key Lock function is ON, [PTT], [MONI], [LOCK], [CALL], [CLEAR], [SURVEILLANCE], and [SIREN] are not locked.

CALL // only on a Digital channel //

Push to make a call that includes a Common ID.

CLEAR // only on a Digital channel //

Push to finish a communication by sending a clear down signal. After the other station receives the clear down signal, the transceiver automatically enters the Stand-by mode.

BREAK // only on a Digital channel //

- Hold down to send a Break-in request call.
 - ① The Break-in request call announces to the other stations on the channel that the user wants to break into the current communication in the group. The transceiver waits for the current communication to end. After the communication ends, the transceiver automatically sends the call.
- While waiting, push this key to cancel the Break-in request call.

S-RING/C-RING

// only on an Analog channel //

Push to make a Smart-Ring call.

// on both an Analog and a Digital channel //

Hold down to make a Call-Ring call.

* CTCSS tone or DTCS code

Programmable key functions (Continued)

SURVEILLANCE

- Hold down to turn ON the Surveillance function.
- Push to turn OFF the function.
 - ① When the function is ON and a signal is received, a beep does not sound and the status indicator does not light, even if you push any key.

SIREN

Hold down to emit a siren sound.

- ① The siren continues to sound until turning OFF the transceiver.
- ① This function is for situations other than an emergency alert, such as a security alarm.

ANNOUNCE

Push to turn the Channel Announce function ON or OFF.

- ① The transceiver announces the position of [Rotary Selector].

SP. FUNC 1/2

These keys are reserved for future functions. No function is assigned.



Zone/Announce

- Push to select a desired Zone.
- Hold down to turn the Channel Announce function ON or OFF.
 - ① The Zone number is announced when selecting a Zone, regardless of the Channel Announce setting.

Section 3 LED INDICATOR

About the LED indicator

The LED indicator indicates the status of various parameters of the transceiver as follows:
 (Reference: R is Red, G is Green, O is Orange)

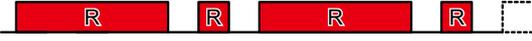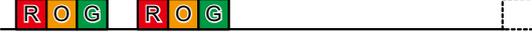- Programming (reading or writing data)
 
- Programming error (if writing fails)
 
- Inh, Blank CH, Unlocked (when you cannot use the channel)
 
- TX low Battery 1 (while transmitting)
 
- TX Low Battery 2 (while transmitting)
 
- Transmitting
 
- Receiving
 
- Scanning
 
- Low Battery 1 (You should charge the battery.)
 
- Low Battery 2 (You must charge the battery.)
 
- When turning ON the power
 
- Making a Smart-Ring call
 
- Lockout, TX Inh, TOT (when transmit is inhibited)
 
- Success:
 - On an analog channel, blinks when a Smart-Ring call is successful.
 - On a digital channel, blinks when sending a Break-in request call.
- Smart-Ring call failed
 
- Siren
 


Section 4 SETTINGS

Setting the Beep function

You can turn the Beep function ON or OFF.

NOTE: Turn ON the Beep function when you set the beep and announcement level, Call-Ring ringer, ringer level, microphone gain, squelch level, VOX function, or VOX gain to check the current level setting by counting or hearing beeps. (pp. 8 ~ 14)

1. Rotate [VOL] to turn OFF the transceiver.
2. Set [Rotary Selector] to any channel other than Channel 16.
3. While holding down [Lower], rotate [VOL] to turn ON the transceiver to enter the Beep Level Adjustment mode.
 - An opening beep sounds and the selected channel number will be announced.
4. Push [Lower] to turn the Beep function ON or OFF.
 - When a beep sounds after pushing [Lower], the Beep function is ON.
 - When no beep sounds after pushing [Lower], the Beep function is OFF.
 - ① The transceiver stores the setting every time you change it.
 - ① If desired, push [Upper] to adjust the beep level. See page 8 for details.
5. Rotate [VOL] to turn OFF the transceiver and exit the Beep Level Adjustment mode.

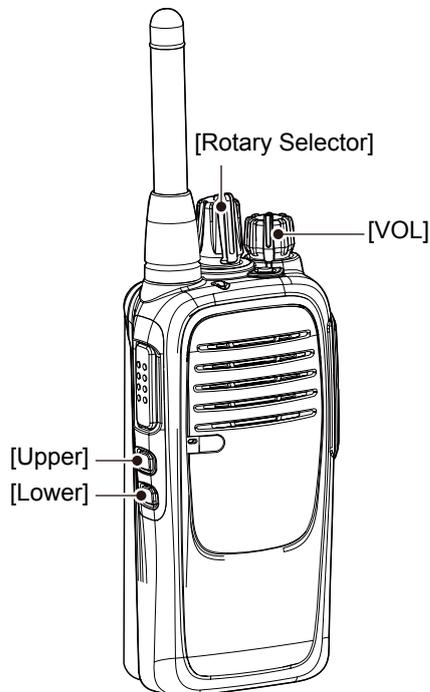

Setting the beep and announcement level


You can adjust the beep and announcement level between 1 and 5, or 1 (linked) and 5 (linked). When a linked option is selected, the beep audio level is adjustable by rotating [VOL].

NOTE: Turn ON the Beep function (p. 7) before you start setting the beep and announcement level.

1. Rotate [VOL] to turn OFF the transceiver.
2. Set [Rotary Selector] to any channel other than Channel 16.
3. While holding down [Lower], rotate [VOL] to turn ON the transceiver and enter the Beep Level Adjustment mode.
 - An opening beep sounds and the selected channel number will be announced.
4. Push [Upper] to change the beep level.
 - A beep sounds every time you push [Upper]. Therefore, you can determine the current level setting by the increasing loudness of the beep that sounds.

① Information

- The adjustable range is 1 to 5 or 1 (Linked) to 5 (Linked).
 - Repeatedly pushing [Upper] first selects 1 (lowest) to 5 (highest), and then selects the lowest linked level, 1 (Linked) to the highest, 5 (Linked). Repeatedly pushing [Upper] repeats the cycle. See the illustration to the right.
 - To determine if you have selected a linked level, set [VOL] to minimum, then push [Upper] repeatedly, listening for the loudest beep (level 5). Pushing [Upper] once after the loudest beep will select 1 (Linked). Repeatedly push [Upper] to select the desired linked level.
5. Rotate [VOL] to turn OFF the transceiver and exit the Beep Level Adjustment mode.

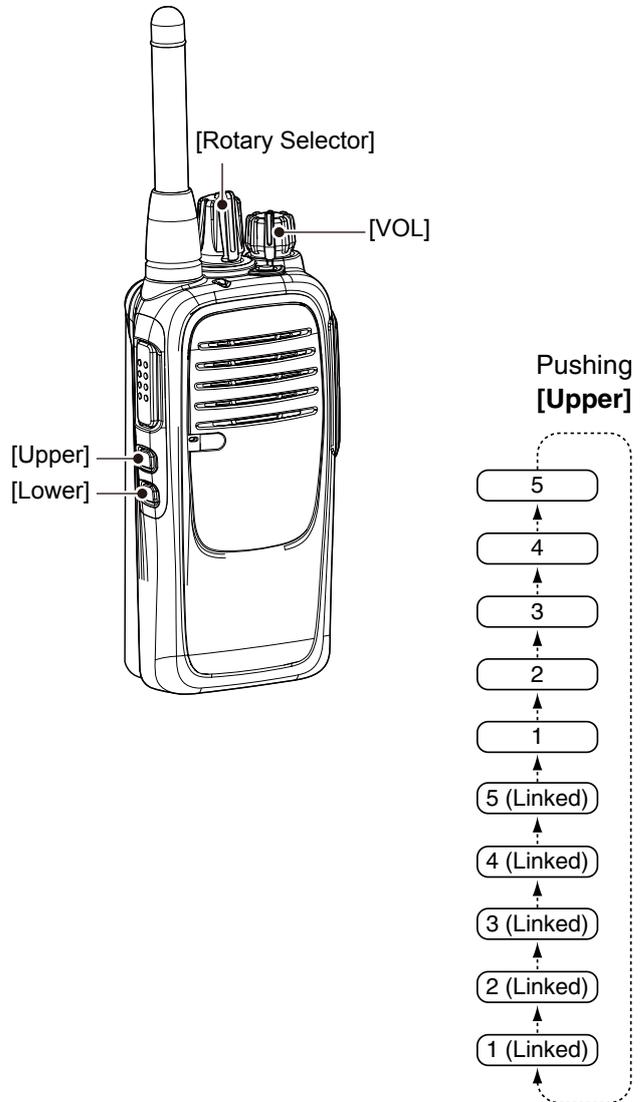


Setting the Call-Ring ringer

The Call-Ring ringer sounds only when the user holds down [S-Ring/C-Ring] to make a call.

NOTE: Turn ON the Beep function (p. 7) before you start setting the Call-Ring ringer.

1. Rotate [VOL] to turn OFF the transceiver.
2. Set [Rotary Selector] to any channel other than Channel 16.
3. While holding down [PTT] and [Lower], rotate [VOL] to turn ON the transceiver and enter the Call-Ring ringer setting mode.
 - The current Call-Ring ringer sounds.
4. Rotate [Rotary Selector] to select a desired Call-Ring ringer.
 - The selected Call-Ring ringer sounds.
5. Rotate [VOL] to turn OFF the transceiver and exit the Call-Ring ringer setting mode.

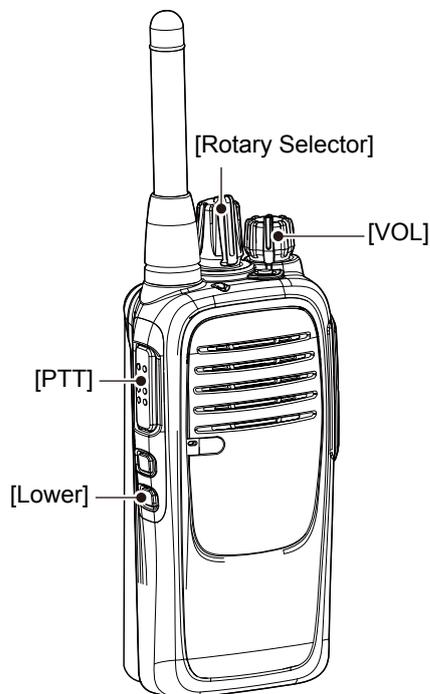

Setting the ringer level


You can adjust the ringer level between 1 and 5, or 1 (Linked) and 5 (Linked). When a linked option is selected, the ringer audio level is adjustable by rotating [VOL].

NOTE: Turn ON the Beep function (p. 7) before you start setting the ringer level.

1. Rotate [VOL] to turn OFF the transceiver.
2. Set [Rotary Selector] to Channel 16.
3. While holding down [Lower], rotate [VOL] to turn ON the transceiver and enter the Ringer Level Adjustment mode.
 - An opening beep sounds and “Sixteen” will be announced.
4. Push [Upper] to increase, or push [Lower] to decrease the ringer level.
 - A beep sounds after pushing [Upper] or [Lower]. Therefore, you can determine the current level setting by the increasing or decreasing loudness of the beep that sounds.

① Information

- The adjustable range is 1 to 5 or 1 (Linked) to 5 (Linked).
 - Repeatedly pushing [Upper] first selects 1 (lowest) to 5 (highest), and then selects the lowest linked level, 1 (Linked) to the highest, 5 (Linked). Repeatedly pushing [Upper] or [Lower] repeats the cycle. See the illustration to the right.
 - To determine if you have selected a linked level, set [VOL] to minimum, then push [Upper] up to 10 times, listening for the loudest beep (level 5). Pushing [Upper] once after the loudest beep will select 1 (Linked). Repeatedly push [Upper] or [Lower] to select the desired linked level.
5. Rotate [VOL] to turn OFF the transceiver and exit the Ringer Level Adjustment mode.

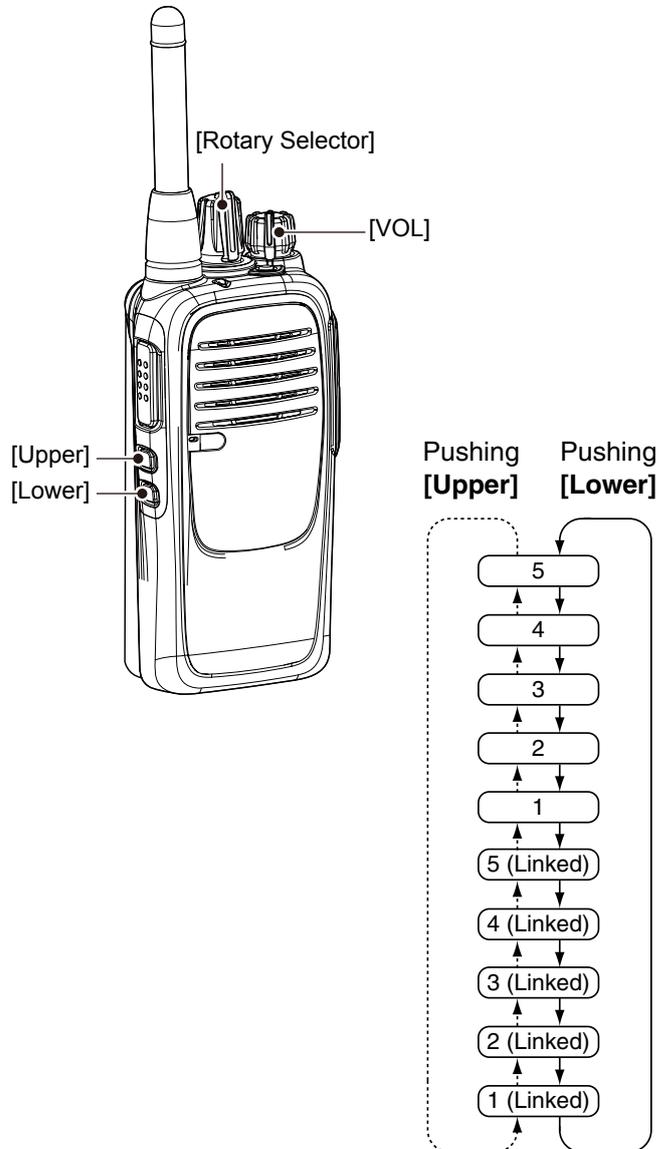


Setting the microphone gain

You can adjust the microphone gain. Higher values make the microphone more sensitive to the user voice.

NOTE: Turn ON the Beep function (p. 7) before you start setting the microphone gain.

1. Rotate [VOL] to turn OFF the transceiver.
2. Set [Rotary Selector] to Channel 16.
3. While holding down [Upper], rotate [VOL] to turn ON the transceiver and enter the Microphone Gain Adjustment mode.
 - An opening beep sounds and “Sixteen” is announced.
4. Push [Upper] to increase, or push [Lower] to decrease the microphone gain.
 - A beep sounds after pushing [Upper] or [Lower].
An error beep sounds if you try to exceed the adjustable range.
 - ① The adjustable range is 1 (minimum) to 4 (maximum).
5. Rotate [VOL] to turn OFF the transceiver and exit the Microphone Gain Adjustment mode.

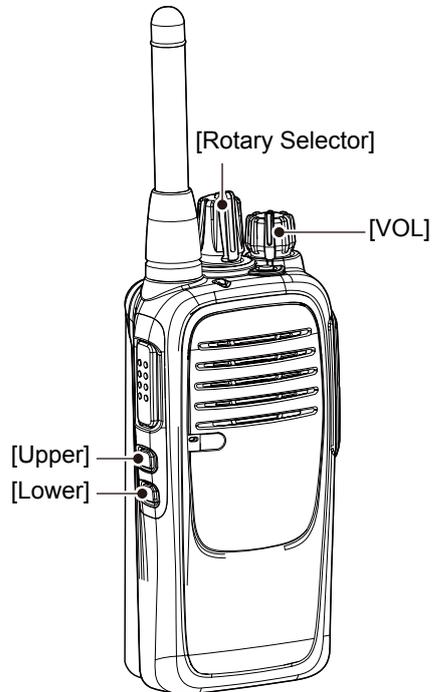


Setting the squelch level

You can adjust the squelch level. The squelch circuit mutes the received audio or noise signal, depending on signal strength.

NOTE: Turn ON the Beep function (p. 7) before you start setting the squelch level.

1. Rotate [VOL] to turn OFF the transceiver.
2. Set [Rotary Selector] to any channel other than Channel 16.
3. While holding down [Upper], rotate [VOL] to turn ON the transceiver and enter the Squelch Level Adjustment mode.
 - An opening beep sounds and the selected channel number will be announced.
4. Push [Upper] to increase the squelch level (tight squelch), or push [Lower] to decrease the squelch level (loose squelch).
 - A beep sounds after pushing [Upper] or [Lower]. An error beep sounds if you try to exceed the adjustable range.
 - ① The adjustable range is 0 (loose squelch) to 9 (tight squelch).
5. Rotate [VOL] to turn OFF the transceiver and exit the Squelch Level Adjustment mode.

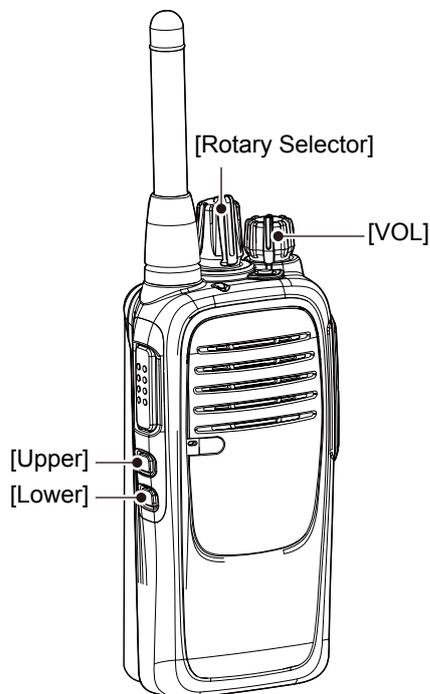


Setting the VOX function

You can turn the VOX function ON or OFF. The VOX function automatically switches between receive and transmit using your voice.

NOTE: Turn ON the Beep function (p. 7) before you start setting the VOX function.

1. Rotate [VOL] to turn OFF the transceiver.
2. Set [Rotary Selector] to any channel other than Channel 16.
3. While holding down [PTT] and [Upper], rotate [VOL] to turn ON the transceiver, to turn the VOX function ON or OFF.
 - When the VOX function is ON, an opening beep and a beep sounds, and then the selected channel number is announced.
 - When the VOX function is OFF, an opening beep and two beeps sound, and then the selected channel number is announced.
4. Rotate [VOL] to turn OFF the transceiver, then turn ON again to restart normal operation.

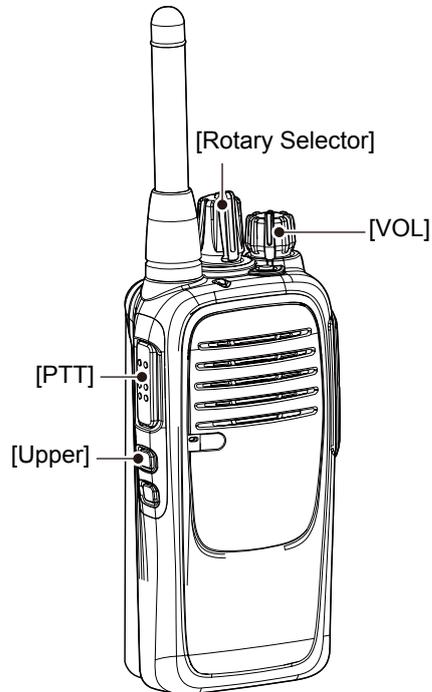


Setting the VOX gain

You can adjust the VOX gain. Higher values make the VOX function more sensitive to the user voice.

NOTE: Turn ON the Beep function (p. 7) before you start setting the VOX gain.

1. Rotate [VOL] to turn OFF the transceiver.
2. Set [Rotary Selector] to Channel 16.
3. While holding down [PTT] and [Upper], rotate [VOL] to turn ON the transceiver and enter the VOX Gain Adjustment mode.
 - An opening beep sounds and “Sixteen” is announced.
4. Push [Upper] to increase, or push [Lower] to decrease the VOX gain.
 - A beep sounds after pushing [Upper] or [Lower].
 - An error beep sounds if you try to exceed the adjustable range.
 - ① The adjustable range is 1 (minimum) to 10 (maximum).
5. Rotate [VOL] to turn OFF the transceiver and exit the VOX Gain Adjustment mode.

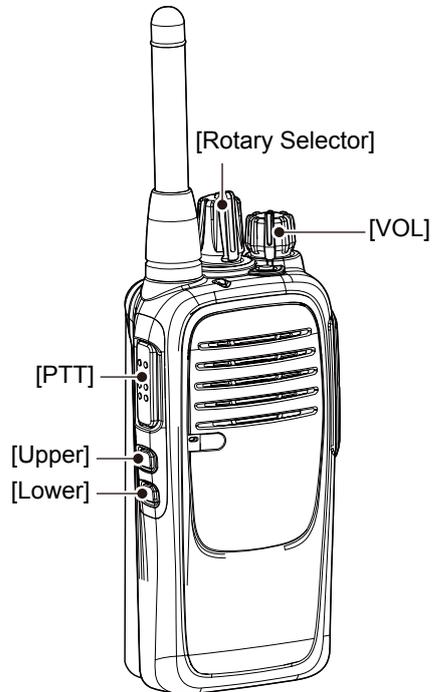


Receiving and transmitting

◇ Receiving

1. Rotate [Rotary Selector] to select a channel.
2. When receiving a call, rotate [VOL] to adjust the audio.

NOTE: When a call is received:

- Beeps sound, and the mute is released.
- The LED indicator lights green.

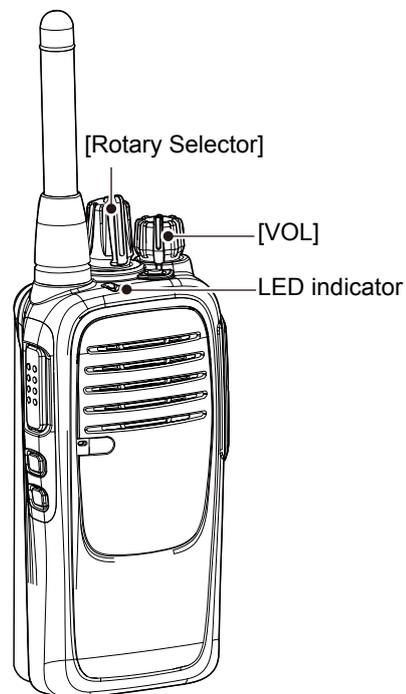

Receiving and transmitting

◇ Transmitting

You can make a call to a station that has the same Common ID. Other digital mode transceivers on the channel will not receive the call that does not match their Common ID.

Before making a call, wait until the channel is clear to avoid interference.

Using [PTT]:

1. Rotate [Rotary Selector] to select a channel.
2. Push [PTT] to call a station.
3. Hold down [PTT] and speak at your normal voice level.
4. Release [PTT] to receive.
5. Push [Clear]* to send a 'Disconnect' signal to terminate the call.

Using the [S-Ring/C-Ring]:

1. Rotate [Rotary Selector] to select a channel.
2. Hold down [S-Ring/C-Ring] for 1 second to call a station.
3. Hold down [PTT] and speak at your normal voice level.
4. Release [PTT] to receive.
5. Push [Clear]* to send a 'Disconnect' signal to terminate the call.


Using the [Call]*:

1. Rotate [Rotary Selector] to select a channel.
2. Push [Call]* to send a call request.

NOTE: After receiving a call request, a ringer sounds on a receive transceiver.

3. Hold down [PTT] and speak at your normal voice level.
4. Release [PTT] to receive.
5. Push [Clear]* to send a 'Disconnect' signal to terminate the call.

* Assign the function to a programmable key by using the CS-F29DR2 PROGRAMMING SOFTWARE (purchase separately). Ask your dealer for details.

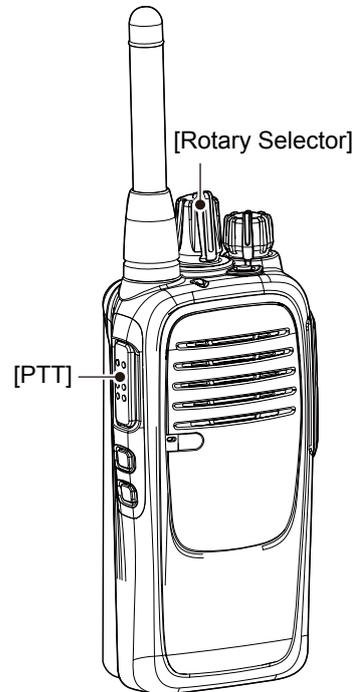

NOTE: To insure the readability of your signal:

1. After pushing [PTT], pause briefly before you start speaking.
2. Hold the microphone 5 to 10 cm from your mouth, and then speak at your normal voice level.

Break-in function

You can send a Break-in request call.
 The Break-in request call announces to the other stations on the channel that the user wants to break into the current communication in the group.
 The transceiver waits for the current communication to end, and then sends the call.

◇ Receiving

1. When receiving a Break-in request call, the ringer sounds, and the LED indicator blinks orange.
2. Push any key to stop the ringer sounding and the LED blinking.

◇ Transmitting


While receiving an audio signal, hold down [Break]* for 1 second to send a Break-in request call.

NOTE:

- The transceiver waits for the communication to end, and then sends the call.
- To cancel the Break-in request call, push [Break]* while waiting.

* Assign the function to a programmable key by using the CS-F29DR2 PROGRAMMING SOFTWARE (purchase separately).
 Ask your dealer for details.

Example: Station A, B, and C are communicating using the same Common ID.

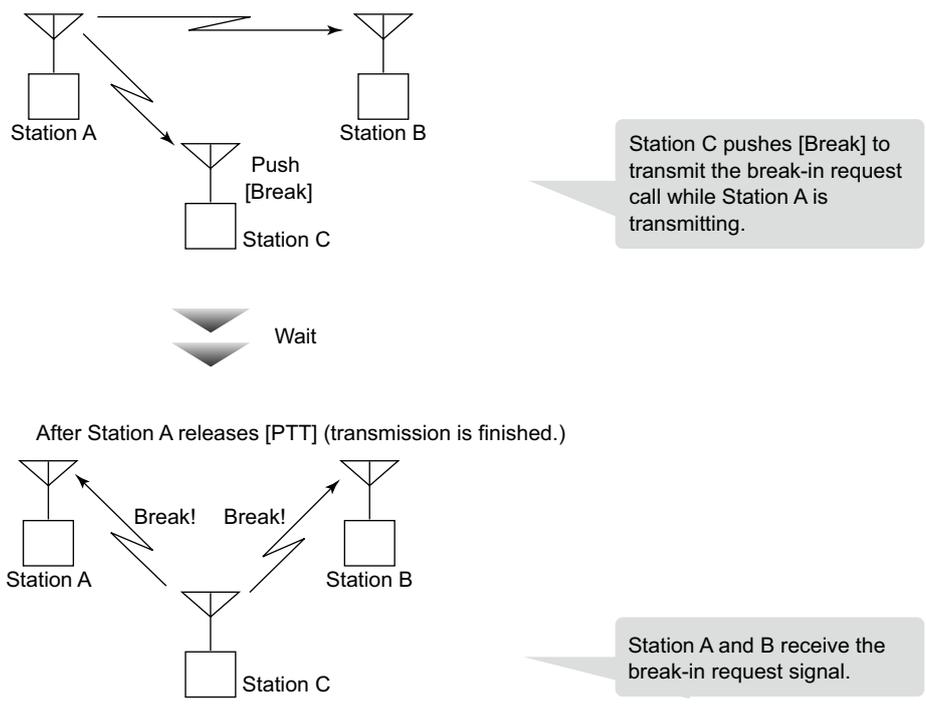


Status call

◇ Receiving

When receiving a Status message, the ringer sounds and the LED indicator status changes, according to the presetting.

Ask your dealer for details.

NOTE: You cannot send a Status call with the IC-F29DR2.

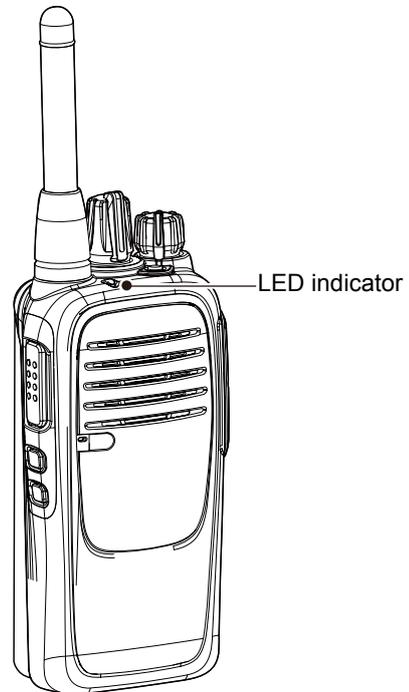


Section 6 OTHER FUNCTIONS

Setting a scan type

You can set to whether the transceiver scans all channels across the zone (All), or scans channels in a selected zone (Zone).

NOTE: Turn ON the Beep function (p. 7) before you start setting a scan type.

1. Rotate [VOL] to turn OFF the transceiver.
2. Set [Rotary Selector] to Channel 16.
3. While holding down [PTT], rotate [VOL] to turn ON the transceiver to set a scan type and confirm the number of beeps.
 - If you want to set to "All," confirm a beep and an opening beep sound when you do step 3. If 2 beeps and an opening beeps sound, turn off the transceiver, then do step 3 again.
 - If you want to set to "Zone," confirm 2 beeps and an opening beep sound when you do step 3. If a beep and an opening beep sound, turn off the transceiver, then do step 3 again.
4. Rotate [VOL] to turn OFF the transceiver, then turn ON again to save the setting.
To start a scan, push the key assigned the scan function.

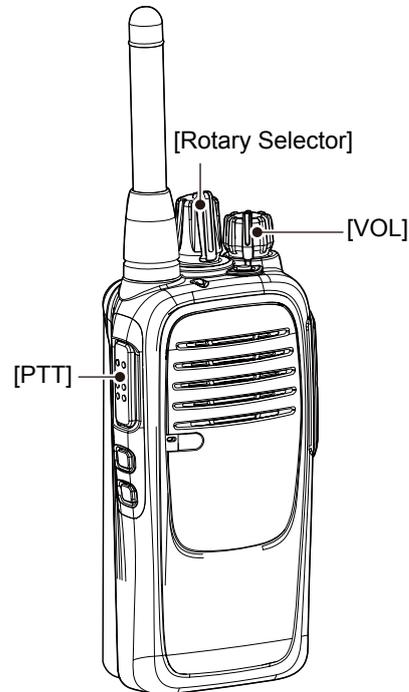

Tone Scan function

This function is effective when the user wants to communicate with another station but does not know its CTCSS tone or DTCS code setting.*


* Depending on the presetting.
Ask your dealer for details.

NOTE: Turn ON the Beep function (p. 7) before you enter the Tone Scan mode.

1. Rotate [VOL] to turn OFF the transceiver.
2. Set [Rotary Selector] to any channel other than Channel 16.
3. While holding down [Upper] and [Lower], rotate [VOL] to turn ON the transceiver and enter the Tone Scan mode.
 - An opening beep sounds and the current channel number is announced. (Example: Ten)
4. Rotate [Rotary Selector] to select a desired channel that you want to assign the detected CTCSS tone or DTCS code to.
 - The selected channel number will be announced.
5. Hold down [Upper] for 1 second to start a scan.
 - The LED indicator blinks green slowly.
6. When detecting a matching tone or code, the scan pauses, and the tone or code is automatically set to the channel.
7. Push [Upper] to cancel the scan.

NOTE: The scan resumes 3 seconds (default) after the signal disappears.

8. Rotate [VOL] to turn OFF the transceiver and exit the Tone Scan mode.

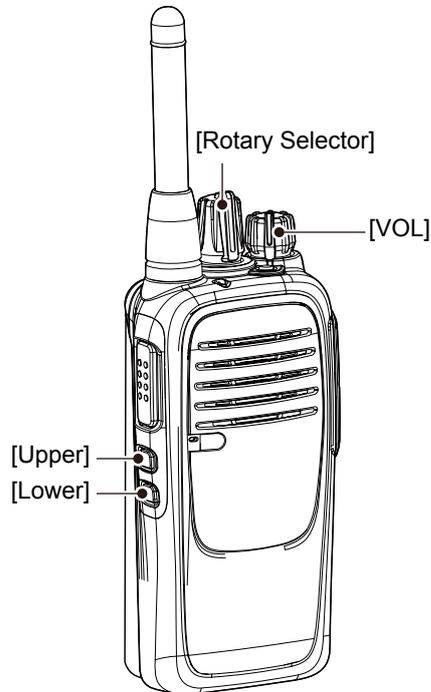

Count on us!